


2 INSTALL DRAIN FROM BELOW FIXTURE


- Remove PLASTER GUARDS (1) from valve bodies and SPOUT NIPPLE (3).
- Inspect that SPOUT NIPPLE O-RING (2) is seated in groove of SPOUT NIPPLE (3).
- Thread SPOUT MOUNT (4) onto SPOUT NIPPLE (3). Align groove on SPOUT MOUNT (4) with face of finished wall. See Figure A.

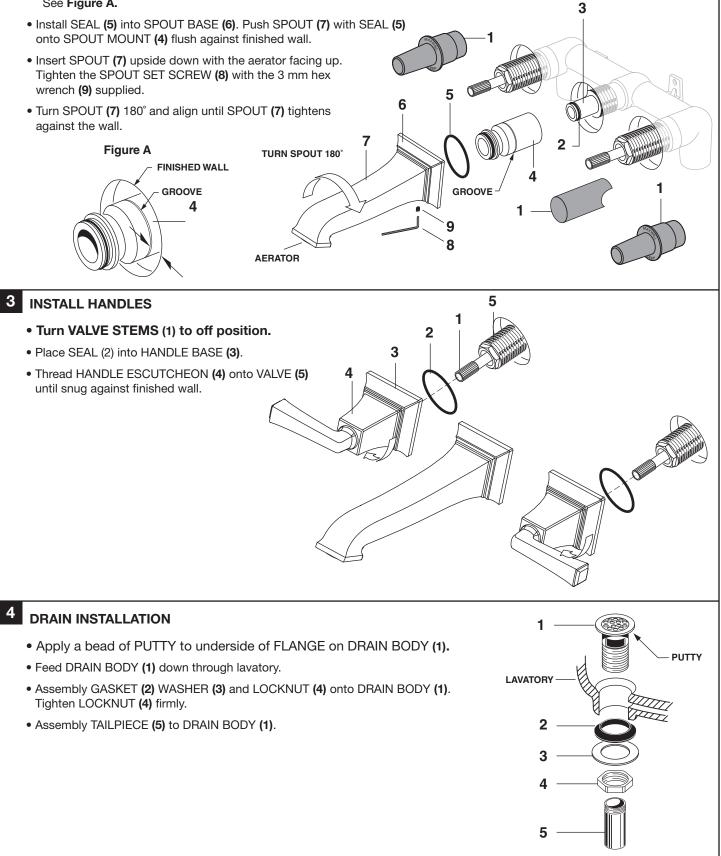

5 SERVICE


6

- **CAUTION** Turn off hot and cold water supplies before begining.
- To change direction of handle rotation, proceed as follows:
 - Turn valve to OFF position.
 - Thread counter-clock wise HANDLE BASE (1) to remove HANDLE ASSEMBLY (2) from VALVE HOUSING (3).
 - Thread counter-clock wise VALVE HOUSING (3) to remove.
 - Use a flat blade screw driver to remove SPRING CLIP (4).
 - Lift STOP WASHER (5), turn 90 $^{\circ}$ and replace.
 - Replace SPRING CLIP (4).
 - Reinstall all parts and HANDLE ASSEMBLY (2).
- If spout drips, operate handles several times from OFF to ON position. Do not force handles turn only 90°.

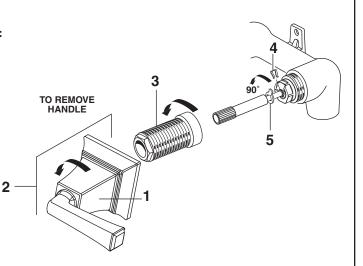

TEST INSTALLED FITTING

- With HANDLES (1) in OFF position, turn on WATER SUPPLIES (2) and check all connections for leaks.
- Remove AERATOR (2).
- Operate both HANDLES (1) to flush water lines thoroughly.
- Replace AERATOR (3).
- Check all drain connections for leaks.

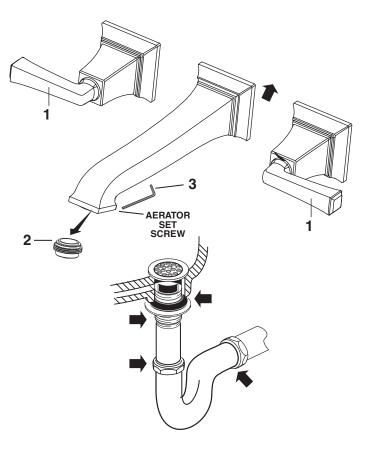

CARE INSTRUCTIONS:

7

DO: SIMPLY RINSE THE PRODUCT CLEAN WITH CLEAR WATER. DRY WITH A SOFT COTTON FLANNEL CLOTH. **DO NOT:** DO NOT CLEAN THE PRODUCT WITH SOAPS, ACID, POLISH, ABRASIVES, HARSH CLEANERS, OR A CLOTH WITH A COARSE SURFACE.

