
## 

## Specifications

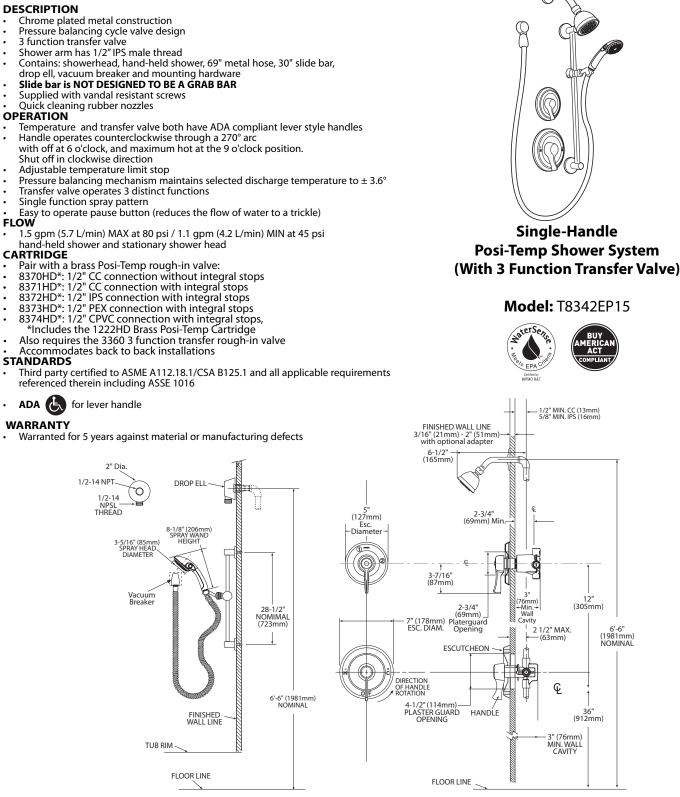

NOTE: This valve is not intended to be used as a shut-off valve. To prevent the potential of cross flow, check valves must be integral to the supply valve or installed in both hot and cold water supply lines. \*Refer to (ADAAG) guidelines or local codes for proper ADA installation.

## **CRITICAL DIMENSIONS**

(DO NOT SCALE)