American Standard


TOWN SQUARE®S

18" TOWEL BAR
24" TOWEL BAR
TOWEL RING
ROBE HOOK
TOILET PAPER HOLDER
24" TRAIN RACK

Thank you for selecting American Standard... the benchmark of fine quality for over 140 years.

To ensure that your installation proceeds smoothly-please read these instructions carefully before you begin.

INSTALLATION INSTRUCTIONS 7455018 Series 7455024 Series 7455190 Series 7455210 Series 7455230 Series 7455260 Series

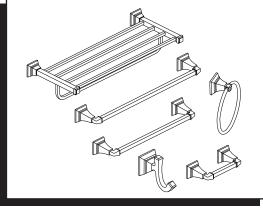

Certified to comply with ANSI A112.18.1M

RECOMMENDED TOOLS











INSTALLATION OF MOUNTING BRACKETS FOR ALL WALL MOUNTED ACCESSORIES

- The WALL MOUNTED ACCESSORIES work best if secured to a wall stud or cross brace within the wall, using the SCREWS (2) supplied.
- If the ACCESSORY is to be installed on a tile or plaster wall, the ANCHORS (3) and SCREWS (2) should be used.
- Determine desired height and location (optional) and mark a center line. Make sure the centerline is level. Using the MOUNTING BRACKET (1) as a template, mark the two spots for the mounting holes. If MOUNTING BRACKET (1) is secured to a stud or cross brace. drill small pilot holes for SCREWS (2).
- For installations on tiled walls or drywall, use TILE ANCHORS (3) and SCREWS (2) for securing MOUNTING BRACKET (1) to wall. Drill two 1/4" diameter holes a minimum of 1-1/4" deep. Insert the two TILE ANCHORS (3) flush with face of finished wall. Place MOUNTING BRACKET (1) over TILE ANCHORS (3) and insert SCREWS (2) provided with a flat blade screwdriver. See illustration below.

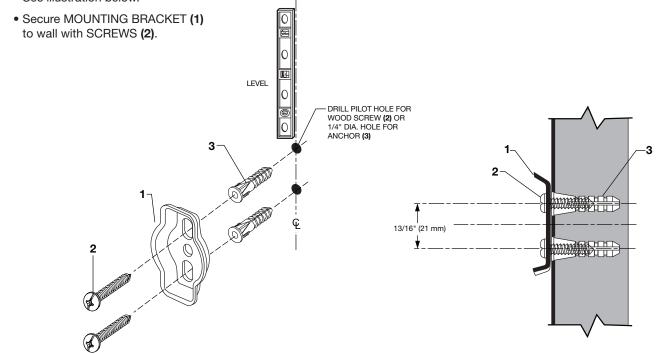


2 TOWEL RING and ROBE HOOK INSTALLATION

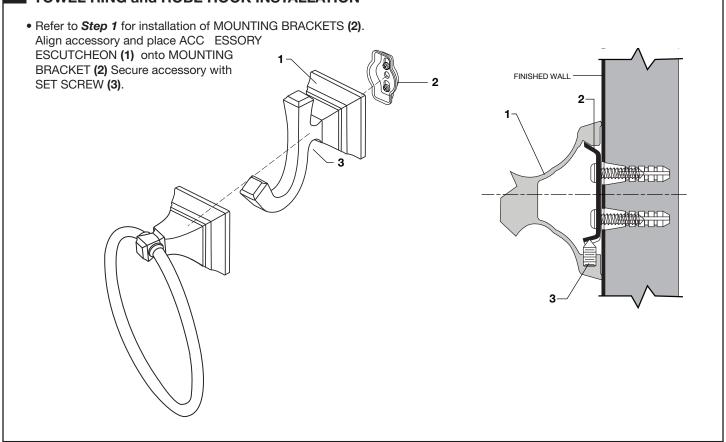


3 INSTALL TOILET PAPER HOLDER

- Refer to Step 1 for installation of MOUNTING BRACKETS (1). NOTE: The center line distance between the two MOUNTING BRACKETS is 6-11/16" (190 mm). Make sure the two MOUNTING BRACKETS (1) are level.
- Install the ACCESSORY ESCUTCHEONS (2) on the MOUNTING BRACKETS (1). Secure ACCESSORY ESCUTCHEONS (2) with SET SCREW (3).

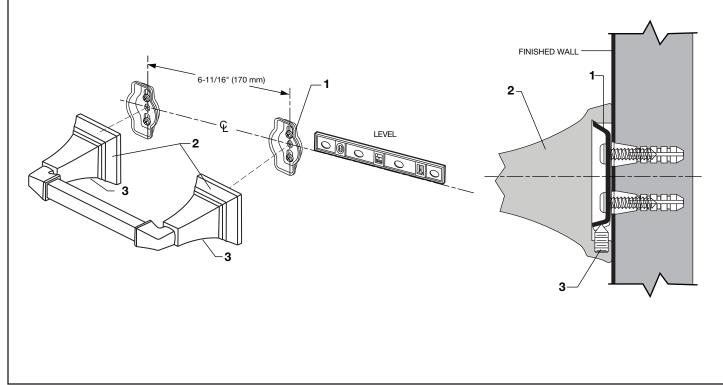


18" TOWEL BAR INSTALLATION

- Refer to Step 1 for installation of MOUNTING BRACKETS (1). NOTE: The center line distance between the two MOUNTING BRACKETS is 18" (457.2 mm). Make sure the two MOUNTING BRACKETS (1) are level.
- Install the ACCESSORY ESCUTCHEONS (2) on the MOUNTING BRACKETS (1). Secure ACCESSORY ESCUTCHEONS (2) with SET SCREW (3).

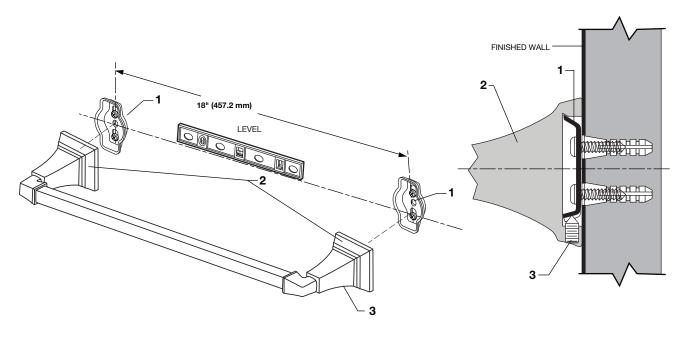


5 24" TOWEL BAR INSTALLATION


- Refer to **Step 1** for installation of MOUNTING BRACKETS (1). **NOTE: The center line distance between the two MOUNTING BRACKETS is 24" (609.6 mm). Make sure the two MOUNTING BRACKETS (1) are level.**
- Install the ACCESSORY ESCUTCHEONS (2) on the MOUNTING BRACKETS (1). Secure ACCESSORY ESCUTCHEONS (2) with SET SCREW (3).

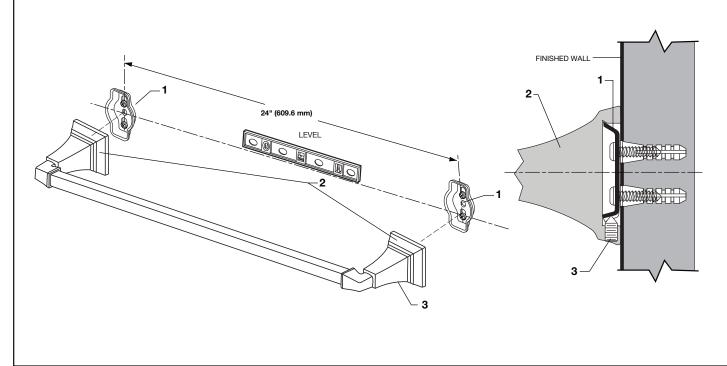

6 24" TRAIN RACK

- Refer to Step 1 for installation of MOUNTING BRACKETS (1).
 NOTE: The center line distance between the two MOUNTING BRACKETS is 24" (609.6 mm).
 Make sure the two MOUNTING BRACKETS (1) are level.
- Install the ACCESSORY ESCUTCHEONS (2) on the MOUNTING BRACKETS (1). Secure ACCESSORY ESCUTCHEONS (2) with SET SCREW (3).

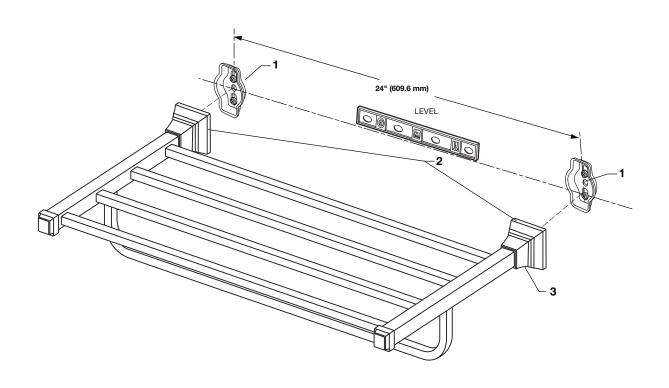

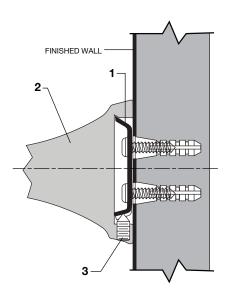

7 CARE INSTRUCTIONS:

DO: CLEAN WITH CLEAR WATER. DRY WITH A SOFT COTTON FLANNEL CLOTH.

DO NOT: DO NOT CLEAN THE PRODUCT WITH SOAPS, ACID, POLISH, ABRASIVES, HARSH CLEANERS, OR A CLOTH WITH A COARSE SURFACE.

American Standard

TOILET PAPER HOLDER

7455.230

TOWEL RING 7455.190

TOWN SQUARE®S

18" TOWEL BAR 24" TOWEL BAR **TOWEL RING ROBE HOOK TOILET PAPER HOLDER** 24" TRAIN RACK

MODEL NUMBERS

7455018 Series 7455024 Series 7455190 Series 7455210 Series 7455230 Series 7455260 Series

Replace the "YYY" with appropriate finish code

POLISHED CHROME	002
POLISHED NICKEL	013
BRUSHED NICKEL	295
LEGACY BRONZE	278

24" TOWEL BAR 7455.024

> 24" TRAIN RACK 7455.260

M970516-0070A MOUNTING KIT

> 18" TOWEL BAR 7455.018

HOT LINE FOR HELP

For toll-free information and answers to your questions, call: 1 (800) 442-1902

ROBE HOOK 7455.210

Mon. - Fri. 8:00 a.m. to 8:00 p.m. EST Saturday 10:00 a.m. to 4:00 p.m. EST

IN CANADA 1-800-387-0369 (TORONTO 1-905-306-1093) Weekdays 8:00 a.m. to 7:00 p.m. EST IN MEXICO 01-800-839-1200





M970516-0070A MOUNTING KIT