Glyde[™] Accessories Technical Specification


Robe Hook

YB2303

Stock Numbers:

- YB2303BN Robe Hook Brushed Nickel Finish
- YB2303CH Robe Hook Chrome Finish
- YB2303BL Robe Hook Matte Black Finish

Dimensions:

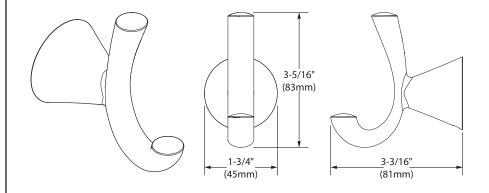

Materials:

Robe Hook is constructed of zinc.

Installation Instructions:

Directions below are for installation into drywall. If installing product into a stud, use the wood screws only.

- 1. Using ¼" drill bit, drill one pilot hole for post.
- 2. Position mounting post to wall by inserting wall anchor into pilot hole and pressing firmly.
- 3. Make sure that locking tab on mounting post is facing down.
- 4. Tighten wall anchor screw while holding mounting post firmly in place. Tighten anchor until resistance increases. DO NOT over tighten.
- 5. Using tip of screw bit press wall spikes (metal pieces on outer edge of mounting post) into drywall.
- Attach post by pressing firmly to mounting post until it clicks. (The square opening at the base of the post must be facing down to match-up with locking tab).

Cleaning Instructions:

To preserve the fine finish of this product, clean only with a soft damp cloth. Dry well. Do not use commercial or abrasive cleaners.

Stock Number: _____ By Moen Incorporated _ Robe Hook

25300 AL MOEN DRIVE • NORTH OLMSTED, OH 44070 CORPORATE HEADQUARTERS: (800) 321-8809 • FAX: (800) 848-6636 INTERNATIONAL: (440) 962-2000 • FAX: (440) 962-2726 CUSTOMER SERVICE (USA): 800-882-0116 • FAX: (888) 379-2720 WWW.MOEN.COM ©Copyright Moen Incorporated

